

- FAMILY GRAIN MILL® SYSTEM LIMITED WARRANTY 1 year warranty

Should any manufacturing defect be discovered, Brownick llc. agrees to repair or replace the defective product or part at their expense, other than handling and return freight charges, provided GRAIN MILL OR FLAKER attachment is returned with shipping charges prepaid.

This warranty is for the original purchaser and is for normal home use only. This warranty is non-transferable.

NOTE: Normal wear of the product is not covered by this warranty.

This warranty does not apply to any unit that has been tampered with or to damage incurred through negligence, misuse, faulty packing or mishandling in transit by any common carrier or by damage caused by foreign objects used before, during or after the milling process. Unclean grain sometimes will contain rock and/or metal objects, which can cause damage to your mill. Always use quality, clean grains. **Never grind OR Flake POPCORN.**

Upon receipt of you mill and attachments inspect all attachments for parts. Report any missing pieces within two week of receipt of mill. FGM Enterprises, Inc. will not replace any missing parts after two week of receipt of mill.

NOTE: The warranty given by FGM DOES NOT APPLY to the appearance of any Product or to any Product which has been subjected to misuse, mishandling or service by any unapproved service person or to any Product which has been damaged, defaced, modified, altered or tampered with, whether externally or internally or to any product sold or used outside United States of America or Canada.

The SOLE AND EXCLUSIVE REMEDY under this warranty is REPAIR OR REPLACEMENT AT FGM'S OPTION of any Product that proves to be defective in manufacture or materials within the 1 year period from the date of purchase FGM WILL NOT BE RESPONSIBLE FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OTHER THAN THE COST OF REPLACING THE PRODUCT OR ANY OTHER MONETARY DAMAGES SUCH AS LOST WAGES OR PROFITS CAUSED BY ANY USE OR INABILITY TO USE THE PRODUCT.

To avoid malfunctions, do not drop the unit, or subject it to strong shocks. The warranty does not cover any breakage due to this type of incident. Be sure to check the grain for rocks or any foreign object. The warranty does not guarantee any breakage due to any foreign object that is passed through the mill.

SHOULD SERVICE BE REQUIRED:

1. Carefully pack the Product along with all of its accessories and other original materials in the original carton and packing materials (if still available) or in another suitable carton with sufficient protective padding to avoid injury to the Product during shipping.

2. YOU MUST ENCLOSE:

Your original packing slip or other proof of date and purchase.
A note describing the problem that needs to be repaired.

3. Ship the Products, prepaid

Family Grain Mill c/o The Wondermill Company
322 West Griffith
Pocatello Idaho 83201
208-234-9352
www.thewondermill.com

FLAKE MILL® USER'S GUIDE

The Family Grain Mill® System is designed and built to give many years of service.

Before the first use, clean the flaker attachment with a dry cloth.

DO NOT USE CORN, BEANS IN THE FLAKER. THE FLAKER WAS DESIGNED TO ONLY ROLL OR FLAKE OATS, GRAINS AND SEEDS.

Use only well cleaned grain. No guarantee will be granted if repair should become necessary due to use of unclean grain, containing a lot of impurities, or because foreign bodies (metal pieces, sand, pebbles, and or plastic parts) had been milled.

Never look over the hopper while flaking. Large grain can fly out of hopper.

Cleaning - Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Always remove the attachments before disassembling or reassembling.

Never use harsh cleansers, chemicals or abrasive cleaners. Nylon and metal brushes cannot be used. Non-kitchen detergents or bleach should not be used. Do not put the Flaker Mill attachment in the dishwasher.

IMPORTANT REMARKS:

Use only well cleaned grain to mill or flake. Hard foreign bodies such as small stones, may damage the conveyer screw on the grain mill or the knurled roller on the flaker mill. If the grain does not fall freely, grain particles may be sticking.

Avoid contacting moving parts. Keep fingers out of discharge opening or hopper. Never put a hard object in the hopper while the machine is operating.

Wipe clean with a damp cloth and dry thoroughly. The guarantee does not apply in as of damage due to inappropriate handling.

WHAT CAN BE FLAKED?

Any dry grains, or seeds such as Oats, wheat, rye, barley, spelt, kamut buckwheat ,millet linseed, flax seed, coriander, cumin, fennel.

CLEANING THE FLAKER MILL

From time to time, or if the Family Flaker Mill has not been used form sometime, we recommend a thorough cleaning of the mill work.

Clean the millwork with a dry soft brush. Do not immerse the parts in water or clean them under running water. Wipe off the parts of the housing with damp cloth. The roller and the cone should be cleaned dry with a soft brush. **NEVER PUT THE FLAKER MILL IN THE DISHWASHER.**

DISMANTLING THE FLAKER MILL ATTACHMENT:

Remove the flake mill from the stand mixer before dismantling the flaker mill. Remove the funnel, (6) untighten the screws (5), Remove the housing (4) pull the knurled roller (3), remove the key (2).

ASSEMBLING THE FLAKER MILL ATTACHMENT

The flaker mill must be removed from the stand mixer before re-assembling the flaker mill.

- Insert the key (2) into the slot that is provided in the front housing.
- Push in the knurled roller (3)
- Place the back housing piece against the front piece and fix it with the screws (5)
- Replace the funnel.

1. Housing
2. Key
3. Knurled roller
4. Housing
5. Screws
6. Funnel

